

So laden Sie Ihr Smartphone kabellos

1. Verbinden Sie das Wireless Charging Pad mit dem mitgelieferten USB Typ C-Kabel an das Typ C-Netzteil. Die LED-Anzeige blinkt blau und weiß.
2. Platzieren Sie Ihr induktionsfähiges Gerät auf dem Charging Pad. Der Ladevorgang startet automatisch. Die LED-Anzeige leuchtet blau.

Hinweis

Wenn kein Ladevorgang stattfindet ändern Sie die Position des Smartphones auf der Ladefläche, damit der Empfänger erkannt werden kann. Bitte beachten Sie, dass verschiedene Mobiltelefone ihre Empfänger in verschiedenen Positionen haben.

Bitte beachten Sie

Einige Smartphonehüllen können das kabellose Laden stören. Legen Sie keine anderen Materialien wie Metallgegenstände, Magnete und Magnetstreifenkarten zwischen das Mobilgerät und die induktive Ladefläche.

Sicherheitshinweise

- Ein Umbau oder Verändern des Produktes beeinträchtigt die Produktsicherheit. Achtung Verletzungsgefahr!
- Berühren Sie die Ladestation auf keinen Fall mit nassen Händen! Sollten Flüssigkeiten austreten, trennen Sie die Ladestation unverzüglich vom Netz!
- Nur für den Gebrauch in überdachten Umgebungen bestimmt. Jeglicher Kontakt mit Feuchtigkeit muss vermieden werden!
- Bitte halten Sie das Gerät fern von Kindern.
- Bitte halten Sie das Gerät fern von Magnetstreifen oder Chipkarten um ein magnetisches Versagen zu vermeiden.
- Öffnen Sie das Gerät niemals eigenmächtig. Führen Sie Reparaturen nie selbst aus!
- Bei Missachtung der Sicherheitshinweise wird keine Haftung übernommen, wenn daraus Personen- bzw Sachschäden entstehen. Darüber hinaus erlischt sofort jeglicher Garantieanspruch.
- Technische Änderungen und Irrtümer vorbehalten.



Dieses Elektrogerät gehört nicht in den Hausmüll. Für die fachgerechte Entsorgung wenden Sie sich bitte an die öffentlichen Sammelstellen in Ihrer Gemeinde.

Für Schäden an angeschlossenen Geräten wird keine Haftung übernommen. Informieren Sie sich unbedingt vor dem Gebrauch beim Hersteller Ihres Gerätes über die Verwendbarkeit dieses Zubehörproduktes.

Hiermit erklärt die XLayer GmbH, dass sich das Gerät XLayer **Wireless Charging Pad Triple** in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der erforderlichen Richtlinien befindet. Die entsprechende Konformitätserklärung kann unter service@xlayer.de angefordert werden.

User Guide

XLayer Wireless Charging Pad Triple




Thank you for choosing the XLayer Wireless Charging Pad Triple.

Contents

1 Wireless Charging Pad Triple, 1 USB to Type C Cable, 1 Type C Power Adapter,
1 User Guide

- | | |
|------------------------------|---|
| (1) Type C Input | (4) USB Output |
| (2) LED Indicator | (5) Type C Input
(MacBook hub extension) |
| (3) Wireless charging output | |

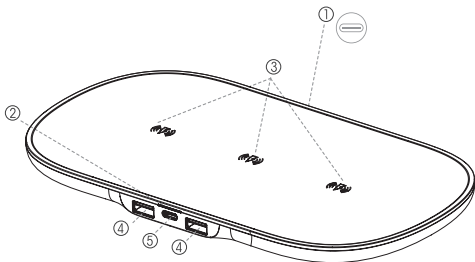

Product Specification

Type C Input:	45W
USB Output 1:	5V/1.0A
USB Output 2:	max. 5V/2.0A
Output wireless:	5W/7.5W/10W
Wireless charging distance:	0-8 mm
Size:	240 x 135 x 12,8 mm
Weight:	280 g

LED indicator

LED indicator	Standby	In charging	Phone fully charged	FOD protection*
Colour	White & blue flash, blue turns off if no phone detected	Blue light	White light	White & blue light flashes quickly till metal removed.

*FOD protection:

The blue & white LED will flashes quickly when there is a metal object near the charging center or a mobile phone which does not support wireless charging. Please remove the metal object. If necessary, remove the protective cover from the mobile phone.

Compatibility

The Wireless Charging Pad is compatible with all smartphones, tablets and other USB powered devices with 5V charging input.

To charge non-inductive devices with the Wireless Charging Pad, insert the charging cable into one of the two USB outputs. Pull the cable from the mobile device after finishing charging.

How to use wireless charging

1. Connect the wireless charger and the adapter with the Type-C sync & charging cable, the blue & white indicators flash slowly.
2. Put your phone near the center area of wireless charger, if the phone is in charging status, the LED indicator lights up blue.

Notes

If charging does not occur, adjust the position of the phone so that the receiver can recognize the phones wireless charging area.

Please note

Some phone cases may block wireless charging.

Do not place other materials, like metal object, magnets, and magnetic strip cards, between the mobile device and the Wireless-Induction area.

When the mobile device is not placed on the charging surface accurately, your mobile device may not charge properly. If you use wireless charging in areas with weak network coverage, you may lose your network connection.

Safety Notice

- A remodeling or modification of the product would affect the safety.
Risk of injury!
- Please do not touch the charger with wet hands! If there is any liquid leaking, immediately cut off the power supply!
- Intended for indoor use only. Contact with moisture must be avoided!
- Please keep the product away from children.
- Please keep the product far from magnetic stripes or chip cards to avoid magnetic failure.
- Do not open the appliance without proper authorization and do not perform repairs yourself!
- If you do not follow the safety instructions and informations on proper handling in this user guide, we assume no liability for any resulting personal injury or damage to property. Furthermore, such cases will invalidate the warranty.
- Modifications and mistakes reserved.



This electrical device does not belong in the garbage. For proper disposal, please contact the public collection in your community.

Please note: we don't accept liability for any damages on connected devices. Please check compatibility of our product with the manufacturer of your device before use.

XLayer GmbH herewith explains that the device XLayer **Wireless Charging Pad Triple** is in accordance with all relevant requirements and guidelines. The declaration of conformity can be requested under service@xlayer.de.